




**Liberty**®  
*The Cleanroom People*


## *Solution to Footborne Contamination*

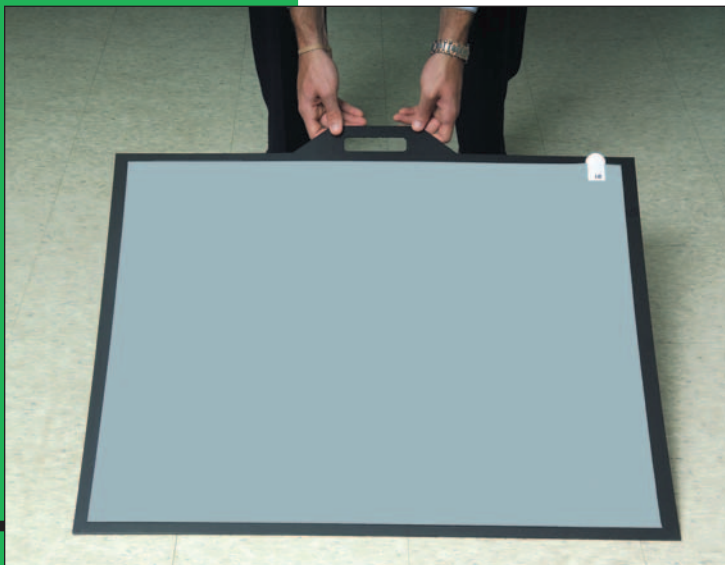

*Designers, Manufacturers, and  
Distributors of Cleanrooms,  
Equipment, Accessories and Supplies*


## TACKY MAT® 800030

Get maximum protection with the Tacky Mat® 800030 for foot-borne contamination. Each sheet has a strong adhesive coating that removes dirt on contact and protects sanitary conditions in cleanroom areas. Each mat consists of 30 disposable sheets. When the top sheet becomes soiled, simply peel off to expose a new, clean surface. Installs in seconds and can last for weeks depending on the amount of traffic. No frame is required; adhesive strips or full-width backing adhere the mat to the floor. Different grades of tack are available.

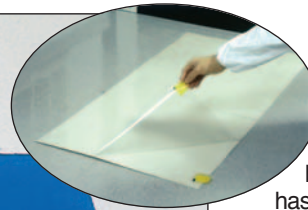

NOMINAL SIZE	ACTUAL TAPE SIZE	WT
18" x 36"	18" x 34" x 5/64"	7 lbs.
18" x 46"	18" x 45 1/2" x 5/64"	8 lbs.
24" x 36"	24" x 34" x 5/64"	10 lbs.
24" x 46"	24" x 45 1/2" x 5/64"	13 lbs.
36" x 36"	36" x 34" x 5/64"	18 lbs.
36" x 48"	36" x 45 1/2" x 5/64"	21 lbs.
36" x 60"	36" x 60" x 5/64"	23 lbs.

## TACKY ROLL MOPS

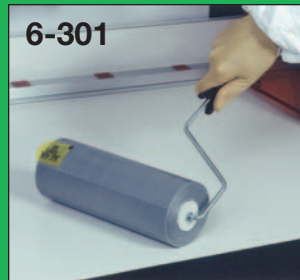

## ALL-IN-ONE TACKY MAT® Step-On or Step-Off Mat



A portable entrance pad mat designed to remove small dirt particles and dust from feet. Each individual sheet contains a microbial agent providing long lasting protection against growth of organisms including mold, mildew and bacteria. When top sheet is dirty, simply peel away. Refills are easy to install and come in 60 sheets. Frame and cleaning pads have a total thickness of 1/4"

**Model 1021 Series**  
24" x 30" frame and pad  
24" x 30" refills, 4 mats/case  
Available in white, grey or blue

**NEW!**  
**Model 1021P Portable Series**  
24" x 30" w/frame and pad  
Ship weight of 15 lbs.



MODEL	DESCRIPTION	WT
6-303	3" Tacky Roll Mop	6 oz.
6-303R	3" Refill (not shown)	2oz.
6-301	9" Tacky Roll Mop	12 oz.
6-301R	9" Refill	10 oz.
6-300	18" T.R. Mop Assembly w/4 refills	10 lbs.
6-300R	18" Refills	4 lbs.
6-336	36" T.R. Mop Assembly	15 lbs.

# SHOE BRUSH MACHINES



## SHOE BRUSH 2010SC

This heavy-duty shoe and sole cleaner features a 99.99% effective HEPA filter exhaust system. Fully self-contained, captured dirt is easily removed from its pull-out drawer and the optional Tacky Mat® with frame assures footborne dirt capture. Remarkably quiet and efficient, this fully automated unit stands 18"(w) x 28" (l) x 39" (h) and weighs 135 lbs.



## THE BULLDOG® 351

Specifically designed to clean shoes where employees or visitors enter your office, warehouse, or work area directly from outside or a dirty work area. This unit handles all types of dirt including mud, leaves, grass clippings, slush or sand. Measuring 16" (w) x 21" (l) x 44" (h) and weighing 135 lbs, this puppy is ideal for heavy industrial areas.



We recommend that the 100-FJR and 2001TB Shoe Cleaners be used in conjunction with a vacuum system. We suggest the AS-5 Hepa Vacuum.

## SHOE BRUSH 100-FJR

This switch-activated, three motor-driven brushes clean shoe sides and bottoms. This 60 pound machine features a 1/4-hp 120V/60Hz electric gear motor and stands 16"(w) x 16.25" (l) x 15.5" (h) plus a 23.5" support stick. Shipping weight: 85 lbs.



## AS-5 HEPA VACUUM

AS-5 HEPA (dry recovery) System is ready to use and includes a tool kit. The convenient design allows easy access to the HEPA filter while maintaining a leak proof seal. It features a 4 stage filtration system: paper filter bag, cloth prefilter, HEPA filter and foam exhaust filter. Rated at only 59 dBA users are excited about this new 3 gallon capacity, light-weight, 17 pound vacuum. It is a 96 CFM, 1000 watts unit with a 33' long power cord. It stands 14" (w) x 17" (h) x 14" (l) and weighs 17 lbs.

## SHOE BRUSH 2001-TB

This fully automated shoe brush features four motor-driven brushes to clean the sides, top and bottom of virtually any piece of footwear. This 132 pound unit features a 1/3-hp, 120V/60Hz electric gear motor and stands 19"(w) x 20.25" (l) x 15.25" (h) plus a 23.75" support handle.



### OPERATING INSTRUCTIONS

1. SHOE LACES MUST BE TIED TIGHTLY & SECURELY. WITH NO LONG HANGING LACES. OPEN TOES, HIGH HEELS, TASSELS, RUBBER SOLES OR CANVAS FOOTWEAR MUST NOT BE USED IN THE SHOE CLEANER.
2. STAND AS CLOSE TO MACHINE AS POSSIBLE.
3. HOLD HANDLE, PRESS SWITCH AND HOLD.
4. INSERT SHOE AS FAR AS POSSIBLE, WITHDRAW AND REPEAT 2 OR 3 TIMES.
5. AFTER COMPLETING 2nd. SHOE RELEASE SWITCH.

Liberty

# MATS AND FLOORING SOLUTIONS



## DURATACK® WASHABLE MAT

A permanent, washable, tack regenerating mat (patent pending) designed specifically for the removal of even the finest footborne and wheelborne contamination. Removes 98-100% of all surface contamination (minimum 3 steps). The mat will self adhere to any flat, clean surface. All mats come with adhesive strips and edge strip. Available in blue, red, forest green and light grey — specify color when ordering. Load resistance 1200 PSI. Easy maintenance — mop, rinse, squeegee and let dry, 100% of the tack is regenerated when cleaned properly and regularly.

MODEL	SIZE	WT
DURA-2	2' x 4'	15 lbs.
DURA-6	4' x 6'6"	45 lbs.
DURA-10	4' x 10'	65 lbs.
DURA-13	4' x 13'	95 lbs.

## SPONGE MOP



Highly absorbent, picks up lint and dust. Lever action engages twin rollers. Complete wringing 'Squeegee' absorbs moisture for faster drying. Polyurethane mop head,

### Stainless Steel

MODEL	SIZE	WT
1210	10" Mop	5 lbs.
1214	14" Mop	5 lbs.
1210R	10" Refill	1 lbs.
1214R	14" Refill	1 lbs.

### Galvanized Steel

MODEL	SIZE	WT
1110	10" Mop	5 lbs.
1114	14" Mop	5 lbs.
1110R	10" Refill	1 lbs.
1114R	14" Refill	1 lbs.

## GREEN CLEAN CLEANER

For normal use and daily cleaning, mop, squeegee and let dry. Packaged in 1 gallon concentration — 1:4 cleaner vs. water. It regenerates the tack, thereby lengthening the life of the mats and flooring.

## CLEAN CLEAN CLEANER

For high traffic and high contamination applications and monthly cleanings; mop, squeegee and let dry. Packaged in 1 gallon concentration — 1:4 cleaner vs. water.

MODEL	SIZE	WT
GREEN	1 Gallon	12 lbs.
CLEAN	1 Gallon	12 lbs.



## WET SHOE SCRUBBER

Scrub the bottoms and sides of all types of footwear! Rugged, replaceable maple brushes have polyethylene bristles. Portable units can be permanently mounted with hardware provided. Add disinfectant and water to the bottom of the pan. Unit is easy to clean with all parts replaceable.

MODEL	SIZE	WT
6981	26" L x 10" W x 4 1/2" H	35 lbs.

## DISINFECTANT MAT (shown above)

Holds five quarts of sanitizing solution to clean shoes at the entrance to laboratories or cleanrooms. Rubber fingers scrub shoe soles while disinfectant sanitizes. Solid rubber formed reservoir will not let solution run out. Flexing action removes dirt. Empty, shake, rinse and refill.

MODEL	SIZE	WT
430-2005	24" x 32"	10 lbs.

(Disinfectant Mat and disinfectant solutions sold separately.)



## LIBERTY INDUSTRIES, INC.

133 Commerce Street • East Berlin, CT 06023 (860) 828-6361 • [www.liberty-ind.com](http://www.liberty-ind.com)

Ask for our FREE Clean Room Catalog or visit our website at [www.liberty-ind.com](http://www.liberty-ind.com)